




# EMM25 Sonde Spar

DESIGNED FOR RAPID DEPLOYMENT, EVENT MONITORING AND EASY USE

Indestructible  
buoy hull survives  
impact, punctures,  
and vandalism

Through-hull  
penetration makes  
routine servicing  
simple, fast and secure

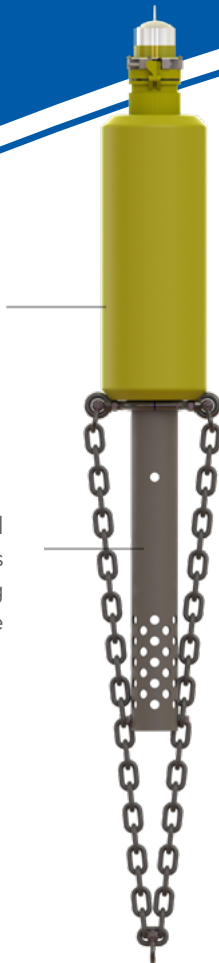

Looking for a cost effective way to deploy a water quality sonde? The **EMM25 Sonde Spar** is designed to be a low cost option for short and long term monitoring. It's simple to use design allows for rapid deployment for event monitoring and emergency response. The lightweight design allows for the system to be deployed by a single person; it can be deployed from a small boat or from shore. The integral deployment tube will accept any YSI EXO or 6-Series sonde or 3rd party device.

**Features Include:**

- Low-Cost Option for Short-Term and Long-Term Monitoring
- Lockable Well Cap for secure deployments
- Single-Person Deployment
- Designed for Rapid Deployment
- Optional amber, self contained flashing beacon for deployments in navigable waters



a xylem brand

# EMM25 Sonde Spar DESIGNED FOR RAPID DEPLOYMENT, EVENT MONITORING AND EASY USE



"EMM25 Buoy deployed in retention pond measuring DO"  
\*Shown with optional beacon\*

## EMM25 Specifications

Hull Material	4PCF Softlite® Ionomer foam body
Weight	25 lbs
Shape	Spar
Dimensions	Hull 10" O.D. x 27" Length
Mooring Attachment	Single-Point Galvanized 1/2 in chain
Deployment Tube	Integral for any YSI EXO or 6-Series Sonde or 3rd party device

## Available Options

Beacon	Up to 2 nm LED Self-Powered IP68 Rated Polycarbonate Integral Bird Spike
--------	---



YSI, a Xylem brand  
1725 Brannum Lane  
Yellow Springs, OH 45387

☎ +1.937.767.7241  
✉ info@ysi.com  
🌐 YSI.com

Who's  
Minding  
the Planet?®



YSI.com/EMM25