

# **IQ SENSORNET**

# **Fieldbus linking**

LINKING THE IQ SENSORNET TO A FIELDBUS



a **xylem** brand



For the most recent version of the manual, please visit  
[www.y si.com](http://www.y si.com).

**Contact**

YSI  
1725 Brannum Lane  
Yellow Springs, OH 45387 USA  
Tel: +1 937-767-7241  
800-765-4974  
Email: [info@ysi.com](mailto:info@ysi.com)  
Internet: [www.y si.com](http://www.y si.com)

**Copyright**

© 2017 Xylem Inc.

# **IQ SENSORNET Fieldbus linking - Contents**

<b>1</b>	<b>Linking the IQ SENSORNET to a fieldbus</b>	<b>5</b>
1.1	Interfaces of the IQ SENSORNET	5
1.2	Linking the IQ SENSORNET	5
1.2.1	Linking the IQ SENSORNET via the RS485 interface	5
1.2.2	Linking the IQ SENSORNET via the Ethernet interface	
	6	
<b>2</b>	<b>Installing the interface in the IQ SENSORNET</b>	<b>7</b>
2.1	Installing the RS485 interface	7
2.2	Mounting the Phoenix connector	9
2.3	Installing the Ethernet interface	10
2.3.1	Communication via Ethernet	11
2.3.2	Ethernet connection in case of indoor installation	11
2.3.3	Ethernet connection in case of outdoor installation (DIQ/S28X-E[F])	11
2.3.4	Ethernet connection in case of outdoor installation (MIQ/MC2, MIQ/MC3)	11
<b>3</b>	<b>Configuring the IQ SENSORNET</b>	<b>14</b>
3.1	Configuring the IQ SENSORNET for Profibus	14
3.1.1	Setting the PROFIBUS address	14
3.1.2	GSD file	16
3.2	Configuring the IQ SENSORNET for Modbus RTU	16
3.2.1	Setting the Modbus interface parameters	16
3.3	PROFIBUS / Modbus RTU checklist	17
3.4	Configuring the IQ SENSORNET for Ethernet fieldbuses	18
3.4.1	GSDML file for Profinet	19
3.4.2	EDS file for Ethernet-IP	19
3.5	Assigning the sensor numbers	19
3.5.1	Creating the assignment of sensor numbers	20
3.5.2	Changing the assignment of sensor numbers	20
3.5.3	Creating the identical assignment of sensor numbers in several systems	22
<b>4</b>	<b>Communication with fieldbuses</b>	<b>23</b>
4.1	Profibus DP(V0), Profinet	24
4.1.1	Profinet module (query format)	24
4.1.2	Profibus modules (query formats)	24
4.1.3	Configuration	24

4.1.4	Data of a module . . . . .	25
4.1.5	Example . . . . .	26
4.2	Profibus DPV1 . . . . .	27
4.2.1	Modules (query formats) . . . . .	27
4.2.2	Data query . . . . .	28
4.2.3	Data block of the sensors . . . . .	29
4.2.4	Example . . . . .	30
4.3	EtherNet/IP . . . . .	32
4.3.1	Modules (query formats) . . . . .	32
4.3.2	Configuration . . . . .	32
4.3.3	Data block of the sensors . . . . .	32
4.3.4	Example . . . . .	34
4.4	Profibus DP(V0) and EtherNet/IP Query of individual sensors . . . . .	36
4.4.1	Configuration . . . . .	37
4.4.2	Data block for sensor selection (output data of the PLC) . . . . .	38
4.4.3	Data block of the sensors (input data of the PLC) . . . . .	38
4.4.4	Example . . . . .	39
4.5	Communication with Modbus RTU, Modbus TCP . . . . .	40
4.5.1	Data transmission . . . . .	40
4.5.2	Query format . . . . .	40
4.5.3	Data block of the sensors . . . . .	41
4.5.4	Example . . . . .	42
<b>5</b>	<b>Encoded data for fieldbus communication . . . . .</b>	<b>45</b>
5.1	Data formats of the sensor datablock . . . . .	45
5.2	Sensor status . . . . .	47
5.3	Measured value status . . . . .	48
5.4	Signaling the sensor status and measured value status in the IQ SENSORNET . . . . .	49
5.4.1	Display in the measured value display on the terminal . . . . .	49
5.4.2	Measured value transmitted on fieldbus level . . . . .	49
5.5	Sensor model . . . . .	50
5.6	Status info of sensors . . . . .	52
5.7	Measuring mode . . . . .	54
<b>6</b>	<b>What to do if . . . . .</b>	<b>56</b>
6.1	PROFIBUS . . . . .	56
6.2	Modbus RTU . . . . .	57
6.3	Ethernet fieldbuses . . . . .	58
<b>7</b>	<b>Contact Information . . . . .</b>	<b>59</b>
7.1	Ordering & Technical Support . . . . .	59
7.2	Service Information . . . . .	59

---

# 1 Linking the IQ SENSORNET to a fieldbus

## 1.1 Interfaces of the IQ SENSORNET

The IQ SENSORNET system provides interfaces for the following networks:

Fieldbus	Interface type	IQ SENSORNET components with interfaces	
Modbus RTU	RS485	YY-MOD	YY = DIQ/S 28X, MIQ/MC3 DIQ/S 182, MIQ/MC2
Profibus		YY-PR	
Modbus TCP	Ethernet	DIQ/S 28X-EF	ZZ = PR, MOD
Ethernet/IP		MIQ/MC3(-ZZ) MIQ/MC2(-ZZ)	
Profinet	Ethernet	DIQ/S 28X-EF MIQ/MC3(-ZZ)	

## 1.2 Linking the IQ SENSORNET

### 1.2.1 Linking the IQ SENSORNET via the RS485 interface

Steps	Profibus	Modbus
1 Establish the physical connection	section 2.1	
2 Configure the interface of the IQ SENSORNET	section 3.1	section 3.2
3 Program the queries and access authorization *	GSD file section 3.1.2	section 4.5
	section 4.1 section 4.2 section 4.4	
4 Interpret the data of the IQ SENSORNET	section 5 ff	

\* Configure the order of the sensors in the IQ SENSORNET (see section 3.5)

### 1.2.2 Linking the IQ SENSORNET via the Ethernet interface

Steps	Ethernet IP	Profinet	Modbus TCP
1 Establish the physical connection		section 2.3	
2 Configure the interface of the IQ SENSORNET		section 3.4	
3 Program the queries and access authorization *	section 4.1	section 4.5	
	EDS file section 3.4.2	GSDML file section 3.4.1	
4 Interpret the data of the IQ SENSORNET		section 5 ff	

\* Configure the order of the sensors in the IQ SENSORNET (see section 3.5)

## 2 Installing the interface in the IQ SENSORNET

### 2.1 Installing the RS485 interface

Profibus and Modbus use the same interface (RS485) for data exchange.

We especially recommend the "Aufbaurichtlinie PROFIBUS/FMS", published by the PROFIBUS user organization PNO, (PNO order number 2.111) with many practical tips for installation that also apply to Modbus systems  
[\(http://www.profibus.com/download/installation-guide/\)](http://www.profibus.com/download/installation-guide/).

Further instructions for the installation and operation of a Modbus network are available on the Internet at [www.modbus.org](http://www.modbus.org).

The PROFIBUS user organization e.V. (PNO) provides detailed information on the subject of PROFIBUS on the Internet at  
[www.profibus.com](http://www.profibus.com).

#### Connecting the Profibus / Modbus cable

The Profibus / Modbus cable is connected to the IQ SENSORNET using a 9-pin D-SUB connector on the top of the housing.

Suitable cables	Fieldbus type	Cables
	Profibus	PROFIBUS cable
	Modbus	Cable for RS485 (e.g. PROFIBUS cable)

#### Connectors to be used

Manufacturer	Type
Phoenix Contact GmbH & Co. KG Flachsmarkt 8 32825 Blomberg Germany <a href="http://www.phoenixcontact.com">http://www.phoenixcontact.com</a>	VS-09-PROFB-SC (Phoenix article no. 1654549, with screwed contacts, available from YSI under the order no. 902 888Y)
	VS-09-PROFB-SP (Phoenix article no. 1654345, with spring contacts)

To remove the blind plug, lift the safety bracket with a suitable screw driver at both clamps on the left and right side (see Fig. 2-1).

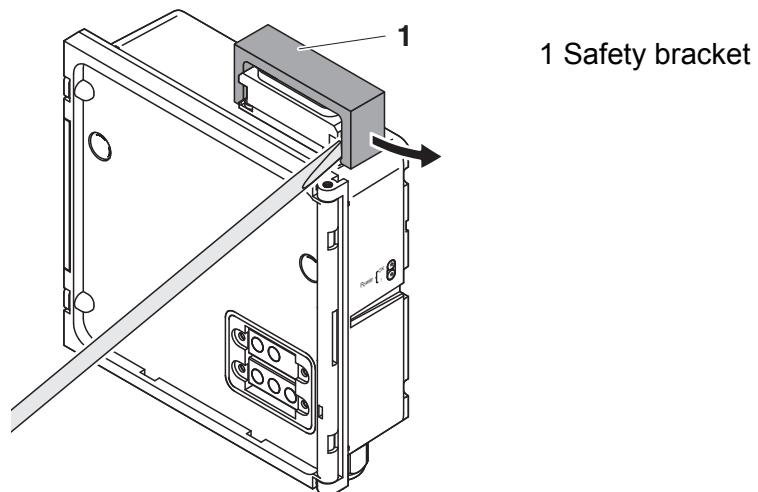


Fig. 2-1 Removing the safety bracket (example: MIQ/MC2, MIQ/MC3)



### CAUTION

If water gets into the enclosure of a module with internal power supply, there is danger of an electric shock.

If water gets into the enclosure of an MIQ module, there is a risk of short circuits.

To prevent the enclosures of the IQ SENSORNET from being penetrated by water the following must be observed:

- Follow the safety instructions of the IQ SENSORNET system operating manual.
- Use connectors recommended by YSI only.
- When the connector is removed, the connection socket of the IQ SENSORNET must be closed with the blind plug and secured with the safety bracket.

## 2.2 Mounting the Phoenix connector

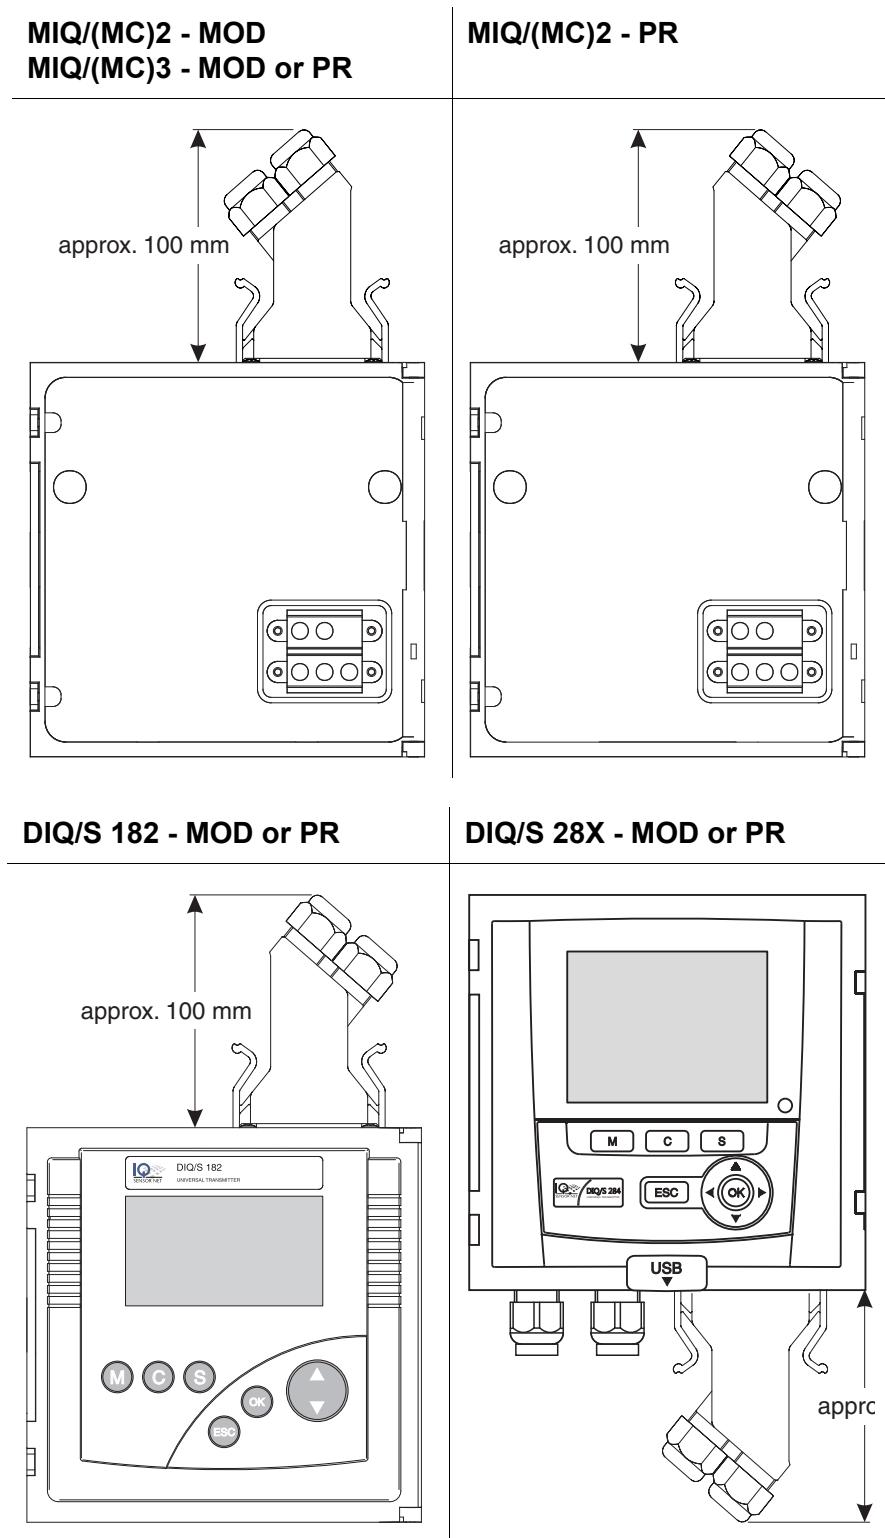


Fig. 2-2 IQ SENSORNET modules with Phoenix connector

Phoenix connector		IQ SENSORNET instrument		
Wire (color*)	Terminals	Pin	Potential at instrument connector	Function
		1		-
		2		-
red	1B and 2B	3	B line	Positive RxD/TxD according to RS 485 specification
		4	RTS	Request To Send
		5	GND BUS	Reference potential for data wires and terminating resistors
		6	+5 V BUS	Supply voltage for terminating resistors
		7		-
green	1A and 2A	8	A line	Negative RxD/TxD according to RS 485 specification
		9		-

\* Wire colors when using a standard PROFIBUS cable.

Please observe the operating manual of the connector.



## 2.3 Installing the Ethernet interface

The IQ SENSORNET system can be linked to a LAN via the following modules:

- MIQ/MC2, MIQ/MC3
- DIQ/S 28X-E[F]

Basic knowledge of network engineering is helpful when establishing a local network.

Depending on the network configuration, several settings have to be made on the individual network components.

Settings that concern network components from third-party manufacturers (such as the router) are only referred to in general here. Detailed information in which menus the settings should be done are given in the respective operating manual of your instrument.

If you have no network knowledge, please contact your network administrator.



Profinet, Modbus TCP and Ethernet IP use the same interface (Ethernet) and the same cable type (Ethernet) for data exchange.

### 2.3.1 Communication via Ethernet

The IQ SENSORNET provides an interface for Fast Ethernet (100 MBit/s).

If configured as a DHCP client, the IQ SENSORNET can automatically get its IP settings from a DHCP server in the network.

### 2.3.2 Ethernet connection in case of indoor installation

The Ethernet cable is connected to the IQ SENSORNET via the RJ45 connector of the following modules:

- MIQ/MC2, MIQ/MC3
- DIQ/S 28X-E[F]

### 2.3.3 Ethernet connection in case of outdoor installation (DIQ/S28X-E[F])

To ensure a safe Ethernet communication with outdoor installation, the moisture protection (ADA/E) available as an accessory has to be mounted. Installation instructions are given with the accessory.

### 2.3.4 Ethernet connection in case of outdoor installation (MIQ/MC2, MIQ/MC3)

When plugged in, the RJ45 socket is not sufficiently protected against moisture. With outdoor installation, the Ethernet cable must therefore be clamped directly on the PCB of the MIQ/MC2 or MIQ/MC3 controller to ensure a safe Ethernet communication. For this purpose there is a 4-pole LSA terminal strip and a shielding terminal on the main PCB. An LSA punch down tool is required for the assembly.

#### Connecting the Ethernet cable with the main PCB

1	Open the MIQ module.
2	Disconnect the flat flexible cable (pos. 1 in Fig. 2-4) from the main PCB.


**MIQ/MC2**

Fig. 2-3 Ethernet connection with RJ45 socket (MIQ/MC2)



**MIQ/MC3**

Fig. 2-4 Ethernet connection with RJ45 socket (MIQ/MC3)

- |   |   |
|---|---|
| 3 | Unscrew the RJ45 socket enclosure (pos. 2 in Fig. 2-4).   |
| 4 | Screw a cable gland with sealing ring into the free duct. Then loosen the cap nut of the cable gland. |

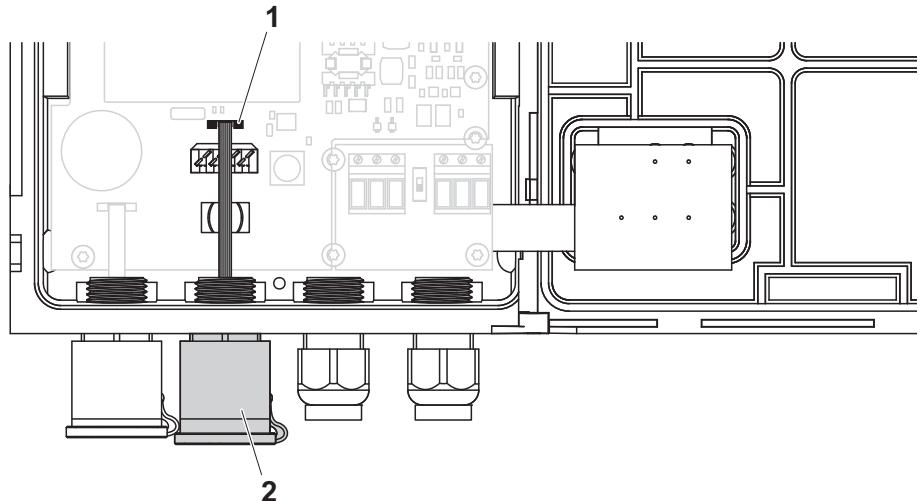

*Fig. 2-5 Ethernet connection via terminal strip  
(example: MIQ/MC2, MIQ/MC3 likewise)*

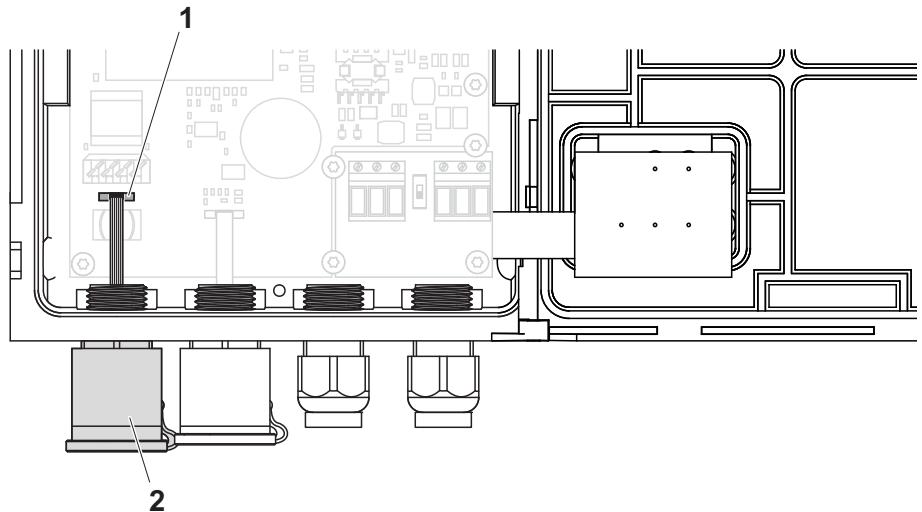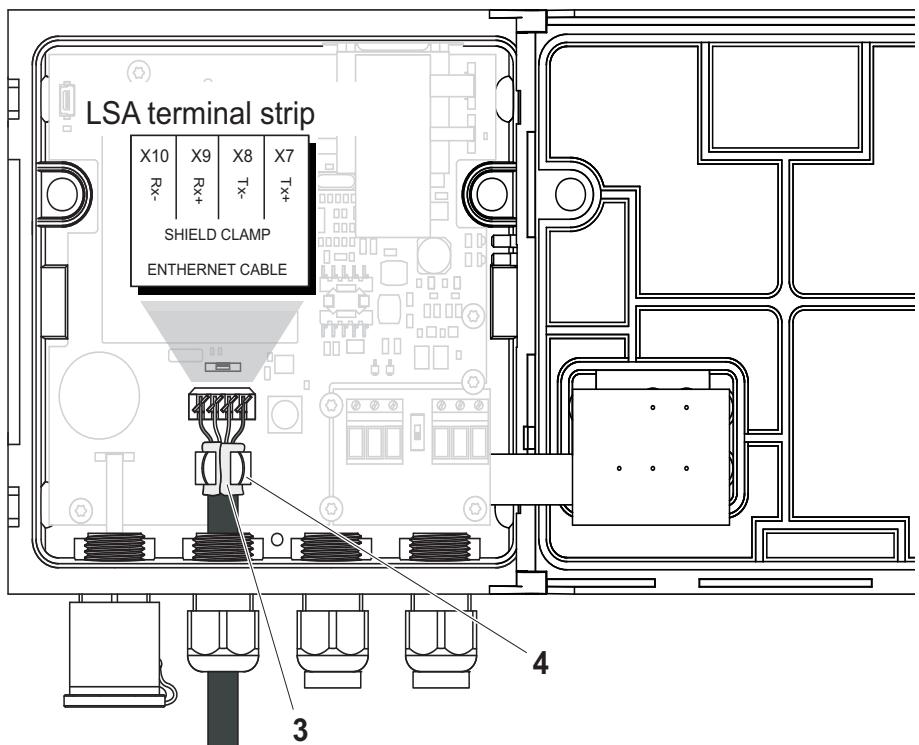- |    |   |
|----|---|
| 5  | Strip the Ethernet cable for approx. 2 cm and untwist the Rx+, Rx-, Tx+ and Tx wires.   |
| 6  | Carefully slash the cable shield (foil + netting) lengthwise and put it backwards over the cable sheath (pos. 3 in Fig. 2-5).   |
| 7  | Feed the Ethernet cable through the cable gland into the module housing.  |
| 8  | Where the cable shield was put backwards, press the Ethernet cable into the shielding terminal (pos. 4 in Fig. 2-5). The shielding terminal must contact the cable shield across a wide area.                               |
| 9  | Connect the Rx+, Rx-, Tx+ and Tx- wires to the LSA terminal strip with the aid of an LSA punch down tool. Make sure that the cable assignment agrees with the specification on the terminal label under the terminal strip. |
| 10 | Fasten the cap nut of the screwed cable gland.  |
| 11 | Close the module.   |

### 3 Configuring the IQ SENSORNET

#### 3.1 Configuring the IQ SENSORNET for Profibus

##### 3.1.1 Setting the PROFIBUS address

###### Opening the setting menu for Profibus

1	Open the setting menu with <S>.
2	For MIQ/MC2, MIQ/MC3, DIQ/S28X-E[F]: Press <▲▼◀▶> and <OK> to select and confirm the menu item, <i>Settings bus interfaces</i>
3	Select and confirm the bus interface with <▲▼◀▶> and <OK>.

Settings	Setting	Selection/Values	Explanation
	Device address	1 ... 126	Instrument address of the IQ SENSORNET in the Profibus



If the Profibus data connection is working, there are the following entries in the menu for Profibus settings:  
 \* *Online (data exc)*: Yes  
 \* *Baud rate*: 19.2 kbit/s (no value when there is no connection)

- |   |                    |
|---|--------------------|
| 4 | Edit the settings. |
|---|--------------------|



To accept all settings, you have to highlight the *Save and quit* menu item at the lower end of the setting table and to confirm with <OK>. If you exit the setting table via <M>, <ESC>/*Quit* or the *Quit* menu item, all changes are ignored.

###### Checking the connection (general)

A functioning Profibus data connection is displayed in the menu for Profibus settings (see above).

###### LEDs (MIQ/MC2, MIQ/MC3)

A functioning Profibus data connection is additionally displayed by two LEDs on the Profibus module.

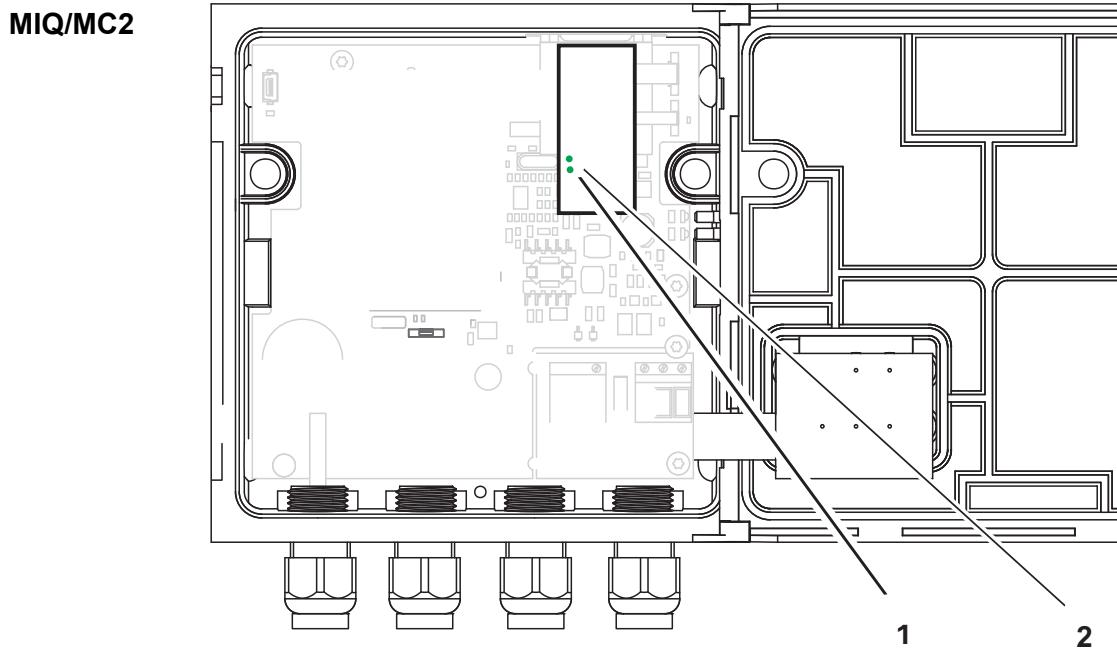


Fig. 3-1 LEDs on the Profibus module (MIQ/MC2)

- 1 lights up green: Data connection OK
- 2 lights up green: Voltage OK

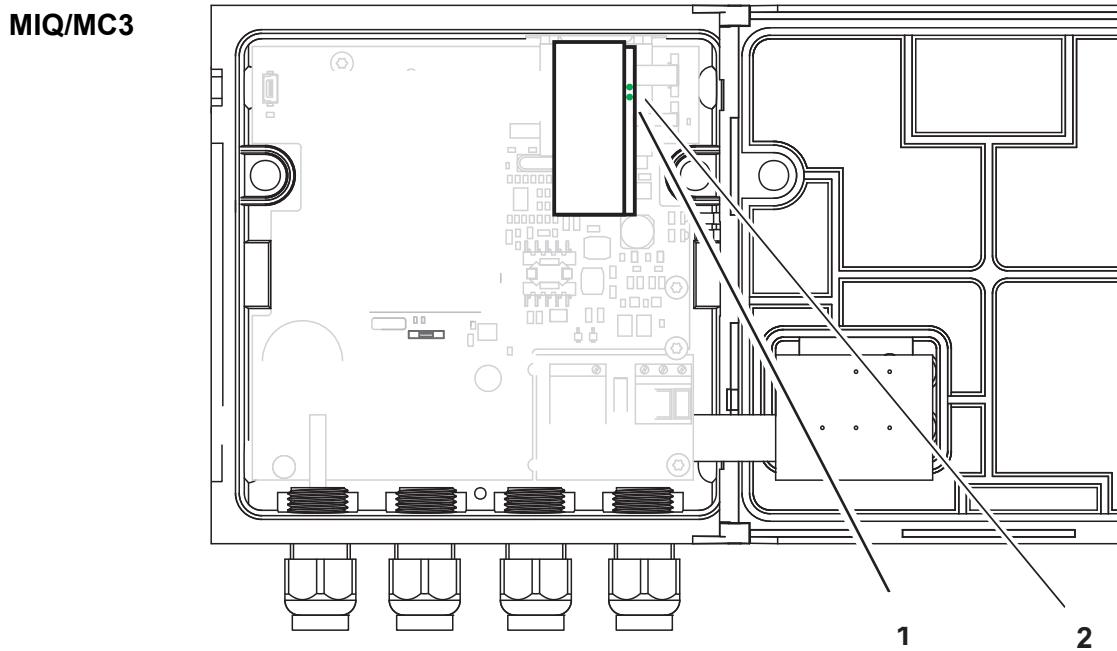


Fig. 3-2 LEDs on the Profibus module (MIQ/MC3)

- 1 lights up green: Data connection OK
- 2 lights up green: Voltage OK

### 3.1.2 GSD file

The GSD file contains all necessary information on the Profibus module and is required by the configuration program of the Profibus master. The current GSD file is provided on the Internet at [www.YSI.com](http://www.YSI.com).

## 3.2 Configuring the IQ SENSORNET for Modbus RTU

### 3.2.1 Setting the Modbus interface parameters

#### Opening the setting menu for Modbus RTU

1	Open the setting menu with <S>.
2	For MIQ/MC2, MIQ/MC3, DIQ/S28X-E[F]: Press <▲▼◀▶> and <OK> to select and confirm the menu item, <i>Settings bus interfaces</i>
3	Select and confirm the bus interface with <▲▼◀▶> and <OK>.

#### Settings

Setting	Selection/Values	Explanation
<i>Device address</i>	1 ... 247	Instrument address of the IQ SENSORNET in the Modbus RTU
<i>Baud rate</i>	1200 2400 4800 9600 19200 38400 57600	Baud rate
<i>Parity</i>	<i>None</i> <i>Even</i> <i>Odd</i>	Parity <i>None</i> (2 stop bits) <i>Even</i> (1 stop bit) <i>Odd</i> (1 stop bit)

- 4 Edit the settings.



To accept all settings, you have to highlight the *Save and quit* menu item at the lower end of the setting table and to confirm with **<OK>**. If you exit the setting table via **<M>**, **<ESC>/Quit** or the *Quit* menu item, all changes are ignored.

### 3.3 PROFIBUS / Modbus RTU checklist

The following checklist supports you when planning, projecting and installing a PROFIBUS or Modbus RTU system with the IQ SENSORNET. For smooth operation, you should be able to answer all questions with "Yes".

- Is the [bus system] (bus segment) installed without branch lines?
- Was the correct cable used (e.g. PROFIBUS cable, see section 2.1)?
- Are the poles of the signal lines A line and B line correctly connected at all bus connections?
- Is it guaranteed that there is no short-circuit between A line, B line and cable shielding?
- Is the shielding installed free of interruptions?
- Are the guidelines for shielding and grounding being observed, and doesn't any unallowed potential equalization current flow via the shielding?
- Is the maximum cable length (per bus segment) observed for the corresponding baud rate?
- Do all devices support the required baud rate?
- Only for Profibus:  
With 12 Mbit/s transmission rate only: Are the bus plugs suitable for this baud rate?
- Are exactly two terminators switched on at the ends of the [bus system] (bus segment)?
- Are the terminators supplied with voltage so the following applies:  
 $U_{B \text{ line}} - U_{A \text{ line}} > + 500 \text{ mV}$ ?
- Do all devices have individual bus addresses?
- After changing the bus address, have the devices been restarted (switched off and on again)?  
Note: The IQ SENSORNET does not have to be restarted.
- Do the addresses projected in the master correspond to the actual addresses?
- Only for Profibus:  
Are all addresses less than or equal to the parameter HSA and less

- than 126 (HSA = Highest Station Address)?
- Only for Profibus:  
Is the currently valid GSD being used? If you are in doubt, download it from the Internet.
  - Only for Profibus:  
Have admissible bus parameters been set only? If you are in doubt set them to default values.
  - Is consistent access to a sensor data block by the bus master ensured?
  - After commissioning:  
Do all devices signal error-free behavior?  
(IQ SENSORNET: status "Online" in the measured value and status display).
  - Only for Profibus:  
A functioning Profibus connection displays the following entries in the menu for Profibus settings (<S>/Settings bus interfaces/Profibus):
    - \* *Online (data exc)*: Yes
    - \* *Baud rate*: 19.2 kbit/s (no value when there is no connection)
 Only for MIQ/MC2 and MIQ/MC3:  
A functioning data connection is additionally displayed by two LEDs on the Profibus module (see section 3.1.1).

### 3.4 Configuring the IQ SENSORNET for Ethernet fieldbuses

#### Opening the settings menu

1	Open the setting menu with <S>.
2	Press <▲▼◀▶> and <OK> to select and confirm the menu item, <i>System settings/TCP/IP settings</i>

Setting	Selection/ Values	Explanation
<i>DHCP</i>	Yes	The IQ SENSORNET is configured as a DHCP client. If a DHCP server is in the network, the IQ SENSORNET receives all other network settings from the DHCP server.
	No	The IQ SENSORNET is not configured as a DHCP client. All other settings have to be done as required.
<i>IP address</i>	Address	Permanent IP address for the IQ SENSORNET in the LAN (if <i>DHCP No</i> ).

Setting	Selection/ Values	Explanation
<i>Subnet mask</i>	Address	Subnet mask (if <i>DHCP No</i> ). The subnet mask depends on the network size (for small networks: e.g. 255.255.255.0).
<i>DNS server</i>	Address	Entry for fieldbus not required. For a connection with the Internet (if <i>DHCP No</i> ), e.g.: <ul style="list-style-type: none"> <li>● IP address of the DNS server in the network</li> <li>● Entry of <i>IP address</i> or e.g. 127.0.0.1</li> </ul>
<i>Standard gateway</i>	Address	Entry for fieldbus not required. For a connection with the Internet (if <i>DHCP No</i> ), e.g.: <ul style="list-style-type: none"> <li>● IP address of the instrument establishing the access to the Internet</li> <li>● Entry of <i>IP address</i> or e.g. 127.0.0.1</li> </ul>

### 3.4.1 GSDML file for Profinet

The GSDML file contains all necessary information on the Profinet module and is required by the configuration program for the Profinet master.

The current GSDML file is available on the Internet at [www.YSI.com](http://www.YSI.com).

### 3.4.2 EDS file for Ethernet-IP

The EDS file contains information on the Ethernet-IP module. It is evaluated by some configuration programs.

The current EDS file is available on the Internet at [www.YSI.com](http://www.YSI.com).

## 3.5 Assigning the sensor numbers

The basis for data transmission between the superordinate control system (PLC) and the IQ SENSORNET is formed by the unique assignment of a sensor to its sensor number (Sxx) in the IQ SENSORNET system. During the initial commissioning, the sensor numbers are assigned by the system in the order in which the sensors are recognized by the system.

Preparation of the IQ SENSORNET for communication with a fieldbus may require, e.g. the following:

- Creating an IQ SENSORNET system with specific assignment of sen-

sor numbers to sensors

- Creating several IQ SENSORNET systems with the identical assignment of sensor numbers to sensors
- Changing the order of the sensors in an already installed system

### 3.5.1 Creating the assignment of sensor numbers

You want to install an IQ SENSORNET system and, at the same time, to create a specific sequence of sensor number assignments to the sensors.

1	Carry out a system start without any sensors (see system operating manual).
2	Connect the sensors to the system in the required order. After connecting each sensor, wait until the sensor is recognized by the system (see system operating manual, chapter Installation).

### 3.5.2 Changing the assignment of sensor numbers

You want to change the assignment of sensor numbers to the sensors in an already running IQ SENSORNET system.

**Change sensor no.**  
menu



Prerequisite:

IQ SENSORNET system with controller software version 3.50 or higher.

1	Open the setting menu with <S>.
2	IQ SENSORNET System 2020 3G, System 2020 XT, System 28X: Using <▲▼◀▶> and <OK>, select and confirm the menu item, <i>System settings / Service / Change sensor no..</i> IQ SENSORNET System 182: Using <▲▼◀▶> and <OK>, select and confirm the menu item <i>System / Change sensor no..</i>
3	IQ SENSORNET System 2020 3G, System 2020 XT, System 28X: Using <▲▼◀▶> and <OK>, select and confirm the column with the sensor numbers.

- |   |   |
|---|---|
| 4 | Select and confirm a sensor with < <b>▲▼◀▶</b> > and < <b>OK</b> >. An entry field for the new sensor number pops up.   |
| 5 | Enter and confirm a new sensor number for the sensor selected with < <b>▲▼◀▶</b> > and < <b>OK</b> >. All sensor numbers that were changed are given an asterisk (*).   |
| 6 | Change further sensor numbers as necessary.   |
| 7 | Using < <b>▲▼◀▶</b> > and < <b>OK</b> >, select and confirm <i>Save and quit</i> .<br>IQ SENSORNET System 2020 3G, System 2020 XT, System 28X:<br>A safety query pops up.<br>IQ SENSORNET System 182:<br>The new sensor numbers are active. |



Links and measured value recordings for all sensors marked by an asterisk (\*) are erased.

- |   |  |
|---|--|
| 8 | IQ SENSORNET System 2020 3G, System 2020 XT, System 28X:<br>Confirm the safety query with Yes. |
|---|--|

#### **Disconnecting / connecting all sensors of the IQ SENSORNET**

You can also change the sensor numbers in the system by disconnecting all sensors, erasing any inactive datasets and then reconnecting all sensors in the correct order.

- |   |   |
|---|---|
| 1 | Unplug all sensors from the IQ SENSORNET. |
|---|---|



When the inactive datasets are deleted, all settings for the sensors are deleted as well.

- |   |  |
|---|--|
| 2 | Delete all inactive datasets in the list of sensors (see System operating manual, chapter <i>Deleting inactive datasets of sensors</i> ).  |
| 3 | Connect the sensors to the system in the required order. After connecting a sensor, wait until the sensor is recognized by the system (see system operating manual, chapter Installation). |

### 3.5.3 Creating the identical assignment of sensor numbers in several systems

You want to install several identical IQ SENSORNET systems and, at the same time, to create the same sequence of sensor number assignments to the sensors in all systems.

To do so, you can save the system configuration of a system configured as a model via the USB interface or via a network connection and then load it to other systems.

	<b>USB interface</b>	
1		Save the configuration from the model to a USB memory device (see system operating manual of your system).
2		Connect the USB memory device with the configuration data to the target system and load the configuration (see system operating manual of your system).
	<b>Network connection</b>	
1		Save the configuration from the model to a PC via a network connection (see system operating manual of your system).
2		Connect the PC to the target system via a network and load the configuration. <ul style="list-style-type: none"><li>● MIQ/MC2, MIQ/TC 2020 XT: see operating manual IQ Software Pack CONNECT.</li><li>● MIQ/MC3, MIQ/TC 2020 3G, DIQ/S 28X-E[F]: see system operating manual of your system (section IQ WEB CONNECT).</li></ul>

## 4 Communication with fieldbuses

The IQ SENSORNET monitors the current state of each sensor operated on the system. The sensor status documents sensor information (measured value status and status info of the sensor) and current processes (e.g. calibration or cleaning).

The sensor status is superordinate to the measured value status. The influence of the sensor status on the measured value is documented with the status descriptions.

For the measured value to be evaluated, e.g. by a superordinate control system such as PLC, the sensor status and measured value status also have to be taken into account together with the measured value. A measured value is suitable for further evaluation if both of the following conditions are met:

- |     |                       |         |
|-----|-----------------------|---------|
| 1st | Sensor status         | MEASURE |
| 2nd | Measured value status | VALID   |

Details on the communication options with a fieldbus are given in the respective sections.

Fieldbus	Query	see
Profibus*, Profinet		
	several sensors	section 4.1
DP(V0), Profinet	one sensor	section 4.4
DPV1	several sensors	section 4.2
Modbus		section 4.5
Ethernet/IP	all sensors	section 4.3
	one sensor	section 4.4

\* Communication with a Profibus applies to the current GSD file (version > 1.22). The current GSD file is provided on the Internet at [www.YSI.com](http://www.YSI.com).

The query of several sensors under Profibus is supported by the Profibus controller from version 3.50 (for the following instruments: MIQ/MC2-PR, MIQ/2-PR, MIQ/MC3-PR, DIQ/S 182, DIQ/S 28X-PR).

## 4.1 Profibus DP(V0), Profinet

### 4.1.1 Profinet module (query format)

The following module (query format) is available:

<b>SensorData</b>	Data block per sensor: 16 bytes You can simultaneously transmit the data of up to 20 sensors.
-------------------	--

### 4.1.2 Profibus modules (query formats)

A Profibus or Profinet instrument can transmit up to 244 bytes of user data with the Profibus DP(V0) protocol. The number of the sensors that can be queried at the same time depends on the size of the data block per sensor.

The following modules (query formats) are available:

<b>SensorData</b>	Data block per sensor: 16 bytes With this you can simultaneously transmit the data of up to 15 sensors ( $15 * 16 \text{ bytes} = 240 \text{ bytes}$ ).
-------------------	--

<b>SensorData compact</b>	Data block per sensor: 12 bytes With this you can simultaneously transmit the data of up to 20 sensors ( $20 * 12 \text{ bytes} = 240 \text{ bytes}$ ).
---------------------------	--



As a rule, some sensor data are already known at the time of the PLC programming and do not have to be evaluated. These sensor data are not transmitted in the module *SensorData compact*:

- Sensor number
- Sensor model
- Measuring mode

### 4.1.3 Configuration

<b>Query SensorData SensorData compact</b>	In the Profibus instrument configuration, a slot is assigned to each sensor in the IQ SENSORNET. The number of the slot corresponds to the sensor number in the IQ SENSORNET. To query sensor data, assign a module ( <i>SensorData</i> or <i>SensorData compact</i> ) to each slot (sensor) you want to query.
--	--



For consistent access with a Siemens PLC with programming language STEP7, the following commands have to be used:

- SFC14 (for reading)

#### 4.1.4 Data of a module

- SensorData:** 16 bytes - from the IQ SENSORNET to the superordinate control system (PLC)
- SensorData compact (only Profibus):** 12 bytes - from the IQ SENSORNET to the superordinate control system (PLC)

Byte		Information	Module	
Sensor-Data	SensorData compact (only Profibus):		Data type	Bits
1	-	Sensor number	Int 8	7-0
2	1	Sensor status	Int 8	7-0
3	-	Sensor model	Int 16	15-8
4	-			7-0
5	2	Status info	Int 16	15-8
6	3			7-0
7	-	Measuring mode	Int 8	7-0
8	4	Status of main measured value Status of secondary measured value	Int 8	7-4
				3-0
9	5	Main measured value (IEEE-754 floating point, 32-bit)	Float 32	31-24
10	6			23-16
11	7			16-8
12	8			7-0
13	9	Secondary measured value (IEEE-754 floating point, 32-bit)	Float 32	31-24
14	10			23-16
15	11			16-8
16	12			7-0

#### 4.1.5 Example

- Querying sensors 2 and 5** Corresponding to the sensor numbers (Sxx) in the IQ SENSORNET, the slots have to be assigned gap-free to the last sensor to be queried.
- Profibus** Slots for sensors not required have to be assigned to the module *empty slot*.
- Profinet** Slots for sensors not required may remain unoccupied.

Configuration	
Slot	Module
1	<i>empty slot</i> (only Profibus; leave unoccupied for Profinet)
2	<i>SensorData</i>
3	<i>empty slot</i>
4	<i>empty slot</i>
5	<i>SensorData</i>

Byte		Sensor data (slot 2 = sensor 2)		
<i>SensorData</i>	<i>SensorData compact</i> (only Profibus):	Value	Information	Meaning of the value
1	-	02h	Sensor number	02h (Int 8) --> 2 Sensor number <b>S02</b>
2	1	02h	Sensor status	02h (Int 8) --> <b>MEASURE</b> see section 5.2
3	-	04h	Sensor model	0401h (Int 16) --> <b>VisoTurb 700 IQ</b>
4	-	01h	Sensor model	see section 5.5
5	2	00h	Status info	0000h (Int 16) --> <b>no errors</b>
6	3	00h	Status info	see section 5.6
7	-	00h	Measuring mode	00h (Int 8) --> <b>FNU Turb</b> see section 5.7
8	4	14h	Measured value status	14h (Int 8) Main measured value (bits 7-4): 1h --> <b>VALID</b> Secondary measured value (bits 3-0): 4h --> <b>MISSING</b> see section 5.3

Byte		Sensor data (slot 2 = sensor 2)		
SensorData	SensorData compact (only Profibus):	Value	Information	Meaning of the value
9	5	42h	Main measured value	429E46C2h (Float 32) --> <b>79,1382</b> Measured parameter and unit, see byte 10 (measuring mode)
10	6	9Eh		
11	7	46h		
12	8	C2h		
13	9	00h	Secondary measured value	00000000h (Float 32) --> <b>0</b> but measured value invalid (MISSING), see byte 11 (measured value status)
14	10	00h		
15	11	00h		
16	12	00h		

## 4.2 Profibus DPV1

### 4.2.1 Modules (query formats)

A Profibus instrument can transmit up to 244 bytes of user data per query with the Profibus DPV1 protocol.

The number of the sensors that can be queried at the same time depends on the size of the data block per sensor.

The following modules (query formats) are available.

**SensorData** Data block per sensor: 16 bytes  
With this you can simultaneously transmit the data of up to 15 sensors ( $15 * 16$  bytes = 240 bytes).

**SensorData compact** Data block per sensor: 12 bytes  
With this you can simultaneously transmit the data of up to 20 sensors ( $20 * 12$  bytes = 240 bytes).



As a rule, some sensor data are already known at the time of the PLC programming and do not have to be evaluated. These sensor data are not transmitted in the module *SensorData compact*:

- Sensor number
- Sensor model
- Measuring mode

#### 4.2.2 Data query

The IQ SENSORNET provides the sensor data for read access only. Write access is not possible.

The data to be queried with Profibus DPV1 are addressed via slot, index and length data.

- SensorData** Each sensor in the IQ SENSORNET is assigned an index in slot 0 of the PLC. Data required for the query:

Data query	
<b>Slot</b>	0
<b>Index</b>	Sensor number of the first sensor to be queried
<b>Length</b>	Number of bytes to be queried

- SensorData compact** Each sensor in the IQ SENSORNET is assigned an index in slot 0 of the PLC. Data required for the query:

Data query	
<b>Slot</b>	0
<b>Index</b>	100 + sensor number of the first sensor to be queried
<b>Length</b>	Number of bytes to be queried

#### 4.2.3 Data block of the sensors

The data block contains the data of the sensors in the order of their registering to the IQ SENSORNET (Sxx number).

- SensorData:** 16 bytes - from the IQ SENSORNET to the superordinate control system (PLC)
- SensorData compact:** 12 bytes - from the IQ SENSORNET to the superordinate control system (PLC)

Byte		Information	Module	
SensorData	SensorData compact		Data type	Bits
1	-	Sensor number	Int 8	7-0
2	1	Sensor status	Int 8	7-0
3	-	Sensor model	Int 16	15-8
4	-			7-0
5	2	Status info	Int 16	15-8
6	3			7-0
7	-	Measuring mode	Int 8	7-0
8	4	Status of main measured value Status of secondary measured value	Int 8	7-4
				3-0
9	5	Main measured value (IEEE-754 floating point, 32-bit)	Float 32	31-24
10	6			23-16
11	7			16-8
12	8			7-0
13	9	Secondary measured value (IEEE-754 floating point, 32-bit)	Float 32	31-24
14	10			23-16
15	11			16-8
16	12			7-0

#### 4.2.4 Example

**Querying sensors 2 and 5** Examples of query formats

*SensorData*

Data query	
<b>Slot</b>	0
<b>Index</b>	2 (sensor number of the first sensor to be queried)
<b>Length</b>	64 bytes = 4 * 16 bytes 4 (number of consecutive sensors) 16 (bytes per sensor in the module <i>SensorData</i> )

*SensorData compact*

Data query	
<b>Slot</b>	0
<b>Index</b>	102 (= 100 + 2) 2 (sensor number of the first sensor to be queried)
<b>Length</b>	48 bytes (= 4 * 12 bytes) 4 (number of consecutive sensors) 12 (bytes per sensor in the module <i>SensorData compact</i> )

Sensor number Sxx	Byte		Sensor data		
	SensorData	SensorData compact	Value	Information	Meaning of the value
02	1	-	02h	Sensor number	02h (Int 8) --> 2 Sensor number <b>S02</b>
	2	1	02h	Sensor status	02h (Int 8) --> <b>MEASURE</b> see section 5.2
	3	-	04h	Sensor model	0401h (Int 16) --> <b>VisoTurb 700 IQ</b> see section 5.5
	4	-	01h	Sensor model	0000h (Int 16) --> <b>no errors</b> see section 5.6
	5	2	00h	Status info	0000h (Int 16) --> <b>no errors</b> see section 5.6
	6	3	00h	Status info	00h (Int 8) --> <b>FNU Turb</b> see section 5.7
	7	-	00h	Measuring mode	00h (Int 8) --> <b>FNU Turb</b> see section 5.7
	8	4	14h	Measured value status	14h (Int 8) Main measured value (bits 7-4): 1h --> <b>VALID</b> Secondary measured value (bits 3-0): 4h --> <b>MISSING</b> see section 5.3
	9	5	42h	Main measured value	429E46C2h (Float 32) --> <b>79,1382</b> Measured parameter and unit, see byte 10 (measuring mode)
	10	6	9Eh		
	11	7	46h		
	12	8	C2h		
	13	9	00h	Secondary measured value	00000000h (Float 32) --> <b>0</b> but measured value invalid (MISSING), see byte 11 (measured value status)
	14	10	00h		
	15	11	00h		
	16	12	00h		
03	17-32	13-24	...	...	...
04	33-48	25-36	...	...	...
05	49-64	37-48	...	...	...

## 4.3 EtherNet/IP

### 4.3.1 Modules (query formats)

The sensor data are transferred as data blocks of 16 bytes per each sensor. The data of up to 30 sensors are transferred ( $30 * 16 \text{ bytes} = 480 \text{ bytes}$ ).



You can also query the sensor data individually (see section 4.4).

### 4.3.2 Configuration

Use the following configuration data:

<b>Connection</b>	GetSensorDataAll
-------------------	------------------

Use the following configuration data if you do not use the EDS file.

<b>Output Assembly</b>	Instance ID = 254 (InputOnly)	0 bytes
<b>Input Assembly</b>	Instance ID = 104 ( <i>SensorDataAll</i> )	480 bytes

### 4.3.3 Data block of the sensors

The data block contains the data of the sensors corresponding to the sensor number (Sxx number) in the IQ SENSORNET.

16 bytes - from the IQ SENSORNET to the superordinate control system (PLC)

<b>Byte</b>	<b>Information</b>	<b>Module</b>	
		<b>Data type</b>	<b>Bits</b>
1	Sensor number	Int 8	7-0
2	Sensor status	Int 8	7-0
3	Sensor model	Int 16	15-8
4			7-0

Byte	Information	Module	
		Data type	Bits
5	Status info	Int 16	15-8
6			7-0
7	Measuring mode	Int 8	7-0
8	Status of main measured value Status of secondary measured value	Int 8	7-4 3-0
9	Main measured value (IEEE-754 floating point, 32-bit)	Float 32	31-24
10			23-16
11			16-8
12			7-0
13	Secondary measured value (IEEE-754 floating point, 32-bit)	Float 32	31-24
14			23-16
15			16-8
16			7-0

#### 4.3.4 Example

Configuration				
Connection		GetSensorDataAll		
Sensor number Sxx	Byte	Sensor data		
		Value	Information	Meaning of the value
01	1	02h	Sensor number	01h (Int 8) --> 1 Sensor number <b>S01</b>
	2	02h	Sensor status	02h (Int 8) --> <b>MEASURE</b> see section 5.2
	3	04h	Sensor model	0401h (Int 16) --> <b>VisoTurb 700 IQ</b> see section 5.5
	4	01h	Sensor model	
	5	00h	Status info	0000h (Int 16) --> <b>no errors</b> see section 5.6
	6	00h	Status info	
	7	00h	Measuring mode	00h (Int 8) --> <b>FNU Turb</b> see section 5.7
	8	14h	Measured value status	14h (Int 8) Main measured value (bits 7-4): 1h --> <b>VALID</b> Secondary measured value (bits 3-0): 4h --> <b>MISSING</b> see section 5.3
	9	42h	Main measured value	429E46C2h (Float 32) --> <b>79,1382</b>
	10	9Eh		Measured parameter and unit, see byte 10 (measuring mode)
	11	46h		
	12	C2h		
	13	00h	Secondary measured value	00000000h (Float 32) --> <b>0</b> but measured value invalid (MISSING), see byte 11 (measured value status)
	14	00h		
	15	00h		
	16	00h		
02	17-32	...	...	...

Sensor number <b>Sxx</b>	Byte	Sensor data		
		Value	Information	Meaning of the value
03	33- 48	...	...	...
04	49- 64	...	...	...
...	...	...	...	...
30	465 - 480			

#### 4.4 Profibus DP(V0) and EtherNet/IP Query of individual sensors

The sensor number (Sxx) is the identification for a sensor. The sensor number is always transmitted in the first byte of the output and input data. Thus the control system (PLC) can clearly query data of individual sensors.

The data is transferred cyclically in two steps:

- Output data of the PLC:

The superordinate control system (PLC) sends a prompt to the IQ SENSORNET to provide data of the sensor with a certain sensor number.

- Input data of the PLC:

The IQ SENSORNET checks whether the prompted sensor number is available and returns the data of the sensor with the relevant sensor number to the superordinate control system (PLC).

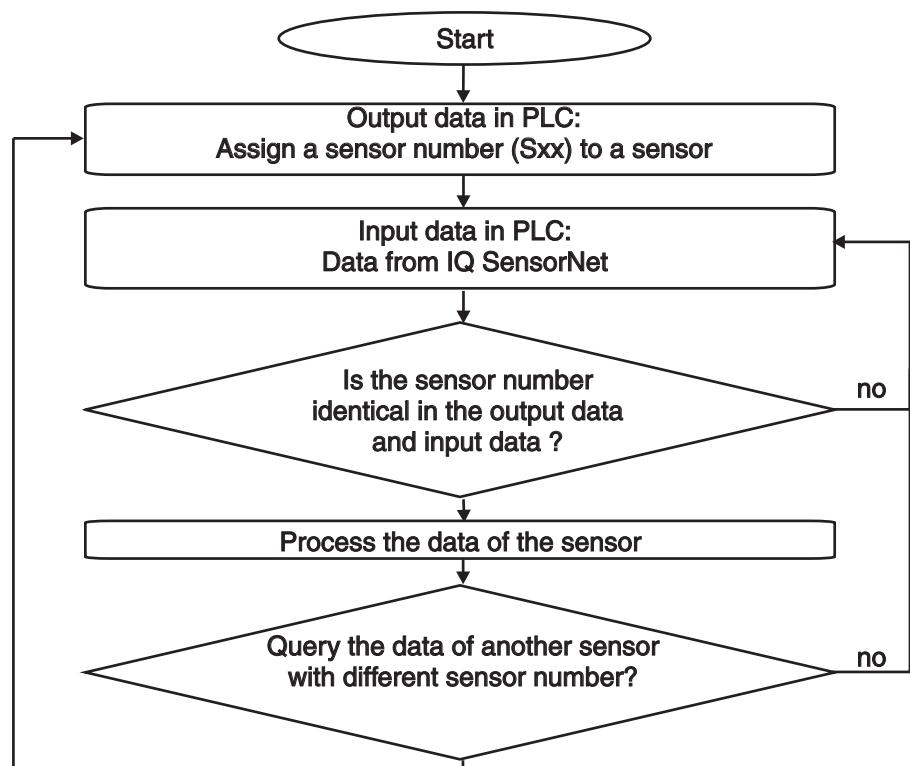


Fig. 4-1 Data transmission in (Profibus, Ethernet/IP)

#### 4.4.1 Configuration

**Profibus DP(V0)**

<b>Slot</b>	1 (exclusively possible at slot 1)
<b>Module</b>	<i>SensorData select (only slot 1)</i>



It is also possible to query several sensors simultaneously (see section 4.1).



Data access must be consistent.  
For consistent access with a Siemens PLC with programming language STEP7, the following commands have to be used:

- Write: DPWR\_DAT (SFC15)
- Read: DPRD\_DAT (SFC14)

**Ethernet/IP**
**Connection**

GetSensorData

Use the following configuration data if you do not use the EDS file.

<b>Output Assembly</b>	Instance ID= 101 (SensorSelector)	1 bytes
<b>Input Assembly</b>	Instance ID = 102 ( <i>SensorData</i> )	16 bytes

If your PLC (e.g. Omron) only supports a granularity of 2 bytes (WORD) for the definition of EtherNet/IP access, select the connection *GetSensorData2B* for the query.

**Connection**

GetSensorData2B

Use the following configuration data if you do not use the EDS file.

<b>Output Assembly</b>	Instance ID = 103 (SensorSelector2B)	2 bytes
<b>Input Assembly</b>	Instance ID = 102 ( <i>SensorData</i> )	16 bytes



You can also query all sensor data simultaneously (see section 4.3).

#### 4.4.2 Data block for sensor selection (output data of the PLC)

1 byte - from the to the superordinate control system (PLC) to the IQ SENSORNET.

Byte	Information	Data format	
		Data type	Bits
1	Sensor number (Sxx) in the IQ SENSORNET	Int 8	7-0

#### 4.4.3 Data block of the sensors (input data of the PLC)

16 bytes - from the IQ SENSORNET to the superordinate control system (PLC)

Byte	Information	Data format	
		Data type	Bits
1	Sensor number	Int 8	7-0
2	Sensor status	Int 8	7-0
3	Sensor model	Int 16	15-8
4			7-0
5	Status info	Int 16	15-8
6			7-0
7	Measuring mode	Int 8	7-0
8	Status of main measured value Status of secondary measured value	Int 8	7-4
			3-0
9	Main measured value (IEEE-754 floating point, 32-bit)	Float 32	31-24
10			23-16
11			16-8
12			7-0
13	Secondary measured value (IEEE-754 floating point, 32-bit)	Float 32	31-24
14			23-16
15			16-8
16			7-0

#### 4.4.4 Example

##### Querying sensor 02

Configuration			
Byte	Value	Information	Meaning of the value
1	02h	Sensor number (Sxx) in the IQ SENSORNET	02h (Int 8) --> 2 Sensor number <b>S02</b>

Sensor data			
Byte	Value	Information	Meaning of the value
1	02h	Sensor number	02h (Int 8) --> 2 Sensor number <b>S02</b>
2	02h	Sensor status	02h (Int 8) --> <b>MEASURE</b> see section 5.2
3	04h	Sensor model	0401h (Int 16) --> <b>VisoTurb 700 IQ</b>
4	01h	Sensor model	see section 5.5
5	00h	Status info	0000h (Int 16) --> <b>no errors</b>
6	00h	Status info	see section 5.6
7	00h	Measuring mode	00h (Int 8) --> <b>FNU Turb</b> see section 5.7
8	14h	Measured value status	14h (Int 8) Main measured value (bits 7-4): 1h --> <b>VALID</b> Secondary measured value (bits 3-0): 4h --> <b>MISSING</b> ; see section 5.3
9	42h	Main measured value	429E46C2h (Float 32) --> <b>79,1382</b>
10	9Eh		Measured parameter and unit, see byte 10 (measuring mode)
11	46h		
12	C2h		
13	00h	Secondary measured value	00000000h (Float 32) --> <b>0</b>
14	00h		but measured value invalid (MISSING), see byte 11 (measured value status)
15	00h		
16	00h		

## 4.5 Communication with Modbus RTU, Modbus TCP

### 4.5.1 Data transmission

On each query of sensor data with the Modbus protocol, a block of consecutive registers is read.

#### Query and response telegram

Data transmission takes place via query and response telegrams. The form of the telegrams is determined by the Modbus RTU protocol. The Modbus master transmits a query telegram with a Modbus command to the Modbus slave (here, the IQ SENSORNET). The Modbus slave transmits a response telegram with the requested data or an error message.

### 4.5.2 Query format

#### Supported Modbus commands

The IQ SENSORNET provides the data block for read access only. Writing Modbus commands are not carried out.

The following commands are available:

Modbus commands	Command code
Read Input Register	04h
Read Holding Register	03h

For a query of sensor data, determine the first register and the number of registers to be read.

#### Determining the first register to be read

The first register to be read depends on the sensor number (Sxx):

$$R = [(S_{xx} - 1) * 8] + 1.$$

**Example:** Determine the first register with data block for the sensor S02:

$$R = [(2 - 1) * 8] + 1 = 9$$

The number of registers to be read for one sensor data block is 8 registers.

With one Modbus query, up to 125 registers (15 data blocks) can be read.

#### 4.5.3 Data block of the sensors

The data block contains the data of the sensors in the order of their registering to the IQ SENSORNET (Sxx number).

The data of a sensor are stored in 8 registers each.

	<b>Modbus</b>	<b>Information</b>	<b>Data format</b>
	<b>Register Bits</b>		<b>Data type</b> <b>Bits</b>
Sensor S01	0001 1-8	Sensor number (S01)	Int 8      7-0
	0001 9-16	Sensor status	Int 8      7-0
	0002 1-16	Sensor model	Int 16      15-0
	0003 1-16	Status info	Int 16      15-0
	0004 1-8	Measuring mode	Int 8      7-0
	0004 9-16	Measured value status	Int 8      7-0
	0005 1-16	Main measured value (IEEE-754 floating point, 32-bit)	Float 32      31-16
	0006 1-16		15-0
Sensor S02	0007 1-16	Secondary measured value (IEEE-754 floating point, 32-bit)	Float 32      31-16
	0008 1-16		15-0
	0009 1-8	Sensor number (S02)	Int 8      7-0
	0009 9-16	Sensor status	Int 8      7-0
	0010 1-16	Sensor model	Int 16      15-0
	0011 1-16	Status info	Int 16      15-0
	0012 1-8	Measuring mode	Int 8      7-0
	0012 9-16	Measured value status	Int 8      7-0
Sensor S03 ...	0013 1-16	Main measured value (IEEE-754 floating point, 32-bit)	Float 32      31-16
	0014 1-16		15-0
	0015 1-16	Secondary measured value (IEEE-754 floating point, 32-bit)	Float 32      31-16
	0016 1-16		15-0
	0017 1-8		Int 8      7-0
	0018 9-16		Int 8      7-0
	... ...	...	... ...



The counting method of the Modbus registers and Modbus bits and the allocation of MSB and LSB is different from the usual method of most programming languages.

	<b>Modbus</b>	<b>Usually</b>
Count start of the register	1	0
MSB* allocation of the register	Bit 1	Bit 15
LSB* allocation of the register	Bit 16	Bit 0

\* MSB = Most significant bit, LSB = Least significant bit

#### 4.5.4 Example

##### Querying sensor S02

<b>Modbus query</b>			
<b>Byte</b>	<b>Value</b>	<b>Information</b>	<b>Meaning of the value</b>
1	01h	Modbus address of the IQ SENSORNET	01h --> 1
2	04h	Function	04h --> 4 <b>Read Input Register</b> see section 4.5.2
3	00h	Start address HI	0008h --> 8
4	08h	Start address LO	<b>Start with register 9</b> (Modbus counting method)
5	00h	Number of HI registers	0008h --> 8 <b>8 registers</b>
6	08h	Number of LO registers	
7	70h	CRC (HI)	Checksum (CRC)
8	0Eh	CRC (LO)	

<b>Modbus response</b>			
<b>Byte</b>	<b>Value</b>	<b>Information</b>	<b>Meaning of the value</b>
1	01h	Modbus address of the IQ SENSORNET	01h --> 1

Modbus response			
Byte	Value	Information	Meaning of the value
2	04h	Function	04h --> 4 <b>Read Input Register</b>
3	10h	Number of bytes	10h --> <b>16</b> 16 bytes (8 registers)
4	02h	Contents of register 9 (HI) = sensor number	02h (Int 8) --> 2 Sensor number <b>S02</b>
5	02h	Contents of register 9 (LO) = sensor status	02h (Int 8) --> <b>MEASURE</b> see section 5.2
6	04h	Contents of register 10 (HI) = sensor model	0401h (Int 16) --> <b>VisoTurb 700 IQ</b> see section 5.5
7	01h	Contents of register 10 (LO) = sensor model	
8	00h	Contents of register 11 (HI) = status info	0000h (Int 16) --> <b>no errors</b> see section 5.6
9	00h	Contents of register 11 (LO) = status info	
10	00h	Contents of register 12 (HI) = measuring mode	00h (Int 8) --> <b>FNU Turb</b> see section 5.7
11	14h	Contents of register 12 (LO) = measured value status	14h (Int 8) Main measured value (bits 7-4): 1h --> <b>VALID</b> Secondary measured value (bits 3-0): 4h --> <b>MISSING</b> see section 5.3

Modbus response			
Byte	Value	Information	Meaning of the value
12	42h	Contents of register 13 (HI) = main measured value	429E46C2h (Float 32) --> <b>79,1382</b>
13	9Eh	Contents of register 13 (LO) = main measured value	Measured parameter and unit, see byte 10 (measuring mode)
14	46h	Contents of register 14 (HI) = main measured value	
15	C2h	Contents of register 14 (LO) = main measured value	
16	00h	Contents of register 15 (HI) = secondary measured value	00000000h (Float 32) --> <b>0</b>
17	00h	Contents of register 15 (LO) = secondary measured value	but measured value invalid (MISSING), see byte 11 (measured value status)
18	00h	Contents of register 16 (HI) = secondary measured value	
19	00h	Contents of register 16 (LO) = secondary measured value	
20	23h	CRC (HI)	Checksum (CRC)
21	5Eh	CRC (LO)	

## 5 Encoded data for fieldbus communication

### 5.1 Data formats of the sensor datablock

#### Measured values (Float 32)

The data for the main and secondary measured values are transmitted in the IEE-754 standard 32-bit floating point format.

Address	Bit representation							
	MSB*				LSB*			
Offset 0h bits 31-24	S	E	E	E	E	E	E	E
Offset 1h bits 23-16	E	M	M	M	M	M	M	M
Offset 2h bits 15-8	M	M	M	M	M	M	M	M
Offset 3h bits 7-0	M	M	M	M	M	M	M	M

\* MSB = Most significant bit, LSB = Least significant bit

If not all of the bits of the exponent are 0, the value is calculated according to:

$$V = -1^S \cdot 2^{E-127} \cdot (1 + M_{b22} \cdot 2^{-1} + M_{b21} \cdot 2^{-2} + M_{b20} \cdot 2^{-3} + \dots + M_{b0} \cdot 2^{-23})$$

If all of the bits of the exponent are 0, the value is calculated according to:

$$V = -1^S \cdot 2^{-126} \cdot (M_{b22} \cdot 2^{-1} + M_{b21} \cdot 2^{-2} + M_{b20} \cdot 2^{-3} + \dots + M_{b0} \cdot 2^{-23})$$

A value is 0 if all the bits of both the exponent as well as the mantissa are 0.

Evaluation	Meaning
Measured value 0	Check the measured value status
Measured value status <> 1	The measured value is invalid (error)



Apart from the byte order described in the bit representation, another order of the bytes is also possible.

Opposite to the order described, the two lower bytes have been exchanged with the two upper bytes in this order (b4 b3 b2 b1 - b2 b1 b4 b3).

For fieldbus applications that can independently interpret floating point numbers (or allow to select a data format for certain registers), the byte order the data interpretation is based on should be checked.

**Sensor model  
Status info  
(INT16)**

The data for the sensor model and status info is transmitted as INT16, i.e. consists of 2 bytes. The assignment is carried out in Motorola format (the higher value byte first).

Address	Bit representation		Information
	MSB	LSB	
Offset 0h bits 15-8	[      ]	[      ]	High byte
Offset 1h bits 7-0	[      ]	[      ]	Low byte

**Measured value status  
(Int8)**

The data for the measured value status of the main and secondary measured values are encoded jointly into a single byte. Bits 7-4 encode the status of the main measured value, bits 3-0 encode the status of the secondary measured value.

**Other data (INT8)**

All other data always consist of only a single byte (Int8).

## 5.2 Sensor status

The sensor status applies to both the main and secondary measured value of a sensor.

Code	Status	Meaning of the status
00h	UNUSED_ID	<p>Sensor and sensor number are not available in the IQ SENSORNET system.</p> <p>The measured value status of the main and secondary measured value is <b>MISSING</b> (4h) (see section 5.3 MEASURED VALUE STATUS).</p> <p>The UNUSED_ID status also occurs when the fieldbus interface of the IQ SENSORNET does not receive any data from the IQ SENSORNET controller for more than 2 minutes. Possible cause: Communication malfunction or controller failure. The data transmitted last remain frozen for the two minutes delay time.</p>
01h	INACTIVE	<p>The sensor is currently inactive. The sensor number (ID) and respective setting dataset are available in the IQ SENSORNET system. The sensor was removed from the IQ SENSORNET system or the communication does not work.</p> <p>The measured value status of the main and secondary measured value is <b>MISSING</b> (4h) (see section 5.3 MEASURED VALUE STATUS). The measured value display on the terminal indicates <i>Init</i> or <i>Error</i>.</p>
02h	MEASURE	<p>The sensor is in measuring mode.</p> <p>The measured value status can be VALID, OFL or INVALID. The measured value display on the terminal indicates the valid measured value, <i>OFL</i> or "----" (invalid measured value).</p> <p>For the measured value to be evaluated, e.g. by a superordinate control system, the sensor status and measured value status also have to be taken into account together with the measured value (see also section 5.3 MEASURED VALUE STATUS)</p>
03h	CALIBRATE	<p>The sensor is being calibrated. No measured value is available.</p> <p>The measured value status of the main and secondary measured value is <b>MISSING</b> (4h) (see section 5.3 MEASURED VALUE STATUS). The measured value display on the terminal indicates <i>Cal</i>.</p>
04h	ERROR	The sensor is in a serious error status.

Code	Status	Meaning of the status
05h	MAINTENANCE	<p>The sensor is in maintenance condition or a cleaning cycle (cleaning including adjustment phase) is active.</p> <p>The measured value display on the terminal shows a flashing measured value or <i>Clean</i>.</p> <p>The measured value and measured value status are frozen while the sensor is in the MAINTENANCE condition.</p> <p>In the case of the measured value status VALID, the measured value is frozen with the value at the start of the MAINTENANCE status.</p>

### 5.3 Measured value status

The measured value status is available for both the main and secondary measured value of a sensor.

Code	Status	Meaning of the status
1h	VALID	<p>The measured value is valid.</p> <p>In the case of the sensor status MAINTENANCE, the measured value is frozen on the value of the start of the MAINTENANCE status.</p> <p>The measured value display of the IQ SENSORNET shows a flashing measured value or <i>Clean</i>.</p>
2h	OFL	<p>The measured value lies outside the selected measuring range.</p> <p>The transmitted measured value is set to 0.</p> <p>The measured value display of the IQ SENSORNET indicates <i>OFL</i>.</p>
3h	INVALID	<p>The measured value is invalid.</p> <p>The transmitted measured value is set to 0.</p> <p>The measured value display of the IQ SENSORNET indicates "----" (invalid measured value).</p>
4h	MISSING	<p>The measured value cannot be determined or is not available.</p> <p>The transmitted measured value is set to 0.</p> <p>The measured value display of the IQ SENSORNET indicates <i>Cal</i> or <i>Error</i>.</p>

## 5.4 Signaling the sensor status and measured value status in the IQ SENSORNET

### 5.4.1 Display in the measured value display on the terminal

Sensor status	Measured value status			
	VALID	OFL	INVALID	MISSING
MEASURE	Measured value	"OFL"	"____"	-
UNUSED_ID	-	-	-	No display (No sensor connected)
INACTIVE	-	-	-	"Init" or "Error"
CALIBRATE	-	-	-	"Cal"
ERROR	-	-	"____"	-
MAINTENANCE	Measured value flashing or "Clean"	"OFL" flashing	"____" flashing	-
-	The combination of sensor status and measured value status is not possible			
"..."	Displayed text			

### 5.4.2 Measured value transmitted on fieldbus level

Sensor status	Measured value status			
	VALID	OFL	INVALID	MISSING
MEASURE	Measured value			
UNUSED_ID			0 (zero)	
INACTIVE				
CALIBRATE				
ERROR				
MAINTENANCE			For the measured value 0 (zero) to be evaluated by a superordinate control system, the measured value always has to be taken into account together with the sensor status and measured value status.	

## 5.5 Sensor model

The sensor model is the model name the sensor registers with on the IQ SENSORNET.

Code	Model
0101h	SensoLyt700IQ
0201h	TetraCon700IQ
0301h	TriOxmatic700IQ
0302h	TriOxmatic701IQ
0303h	TriOxmatic702IQ
0304h	SC FDO 700 (FDO700IQ)
0305h	SC FDO 701 (FDO700IQ)
0401h	VisoTurb700IQ
0402h	ViSolid700IQ
0501h	AmmoLyt700IQ
0503h	AmmoLyt+ (AmmoLyt+700IQ)
0907h	AmmoLyt+K (AmmoLyt+700IQ)
0601h	NitraLyt700IQ
0602h	NitraLyt+ (NitraLyt+700IQ)
0701h	NitraVis700/1IQ
0702h	NitraVis700/5IQ
0703h	CarboVis700/5IQ
0704h	SolidVis700IQ (UV/VIS sensors with TSS option)
0705h	NitraVis700/5IQ (NiCaVis700IQ)
0706h	CarboVis700/5IQ (NiCaVis700IQ)
0707h	CarboVis700/1IQ
0801h	MIQ/IC2, current input 1
0802h	MIQ/IC2, current input 2
0901h	VARiON A (VARiON700IQ)
0902h	VARiON N (VARiON700IQ)
0905h	VARiON A (VARiON+700IQ)
0906h	VARiON N (VARiON+700IQ)

<b>Code</b>	<b>Model</b>
0907h	VARiON K (VARiON+700IQ)
0A01h	NitraVis701 IQ (+ NiCaVis701IQ NI)
0A02h	NitraVis705 IQ (+ NiCaVis705IQ + NiCaVis705IQ NI)
0A03h	CarboVis701 IQ (+ NiCaVis701IQ NI)
0A04h	CarboVis705 IQ (+ NiCaVis705IQ + NiCaVis705IQ NI)
0A05h	UV701 IQ SAC
0A06h	UV705 IQ SAC
0A07h	SolidVis701 IQ (UV/VIS sensors with TSS option)
0A08h	SolidVis705 IQ (UV/VIS sensors with TSS option)
0A09h	UV701 IQ NOx
0A0Ah	UV705 IQ NOx
0A1Ah	Virtual N sensor - NitraVis701IQ NI
0A1Bh	Virtual N sensor - NitraVis705IQ NI
0A1Ch	Virtual C sensor 1 - CarboVis701 IQ
0A1Dh	Virtual C sensor 2 - CarboVis701 IQ
0A1Eh	Virtual C sensor 3 - CarboVis701 IQ
0A1Fh	Virtual C sensor 4 - CarboVis701 IQ
0A20h	Virtual C sensor 1 - CarboVis705 IQ
0A21h	Virtual C sensor 2 - CarboVis705 IQ
0A22h	Virtual C sensor 3 - CarboVis705 IQ
0A23h	Virtual C sensor 4 - CarboVis705 IQ
0B01h	P 700 IQ
0C01h	IFL 700 IQ
0C02h	IFL 701 IQ

## 5.6 Status info of sensors

Model	Bit 0	Bit 1	Bit 2	Bit 3-31
SensoLyt700IQ	<i>Component hardware defective</i>	SensCheck: pH electrode defective, glass broken	-	-
TetraCon700IQ		-	-	-
TriOxmatic700IQ		<i>SensReg: Electrolyte supply is depleted</i>	<i>SensLeck: Membrane head damaged</i> *	-
TriOxmatic701IQ				-
TriOxmatic702IQ			-	-
SC FDO 700		Measurement interfered	-	-
SC FDO 701		Measurement interfered	-	-
VisoTurb700IQ		<i>SensCheck: Sensor contaminated</i>	<i>SensCheck: Ultra-sound cleaning system has failed</i>	-
ViSolid700IQ				-
AmmoLyt700IQ		-	-	-
AmmoLyt+		-	-	-
AmmoLyt+K		-	-	-
NitraLyt700IQ		-	-	-
NitraLyt+		-	-	-
NitraVis700/xIQ		-	-	-
CarboVis700/xIQ		-	-	-
SolidVis700IQ		-	-	-
NitraVis70xIQ	<i>Component hardware defective xxx</i>	<i>Optical measuring range exceeded</i>	-	-
CarboVis70xIQ			-	-
SolidVis70xIQ			-	-
UV70x IQ SAC			-	-
UV70x IQ NOx			-	-
MIQ/IC2		-	-	-

\* The SensLeck function is not available with the sea water model (-SW variant)

continued

Model	Bit 0	Bit 1	Bit 2	Bit 3-31
VARiON A	<i>Component hardware defective</i>	-	-	-
VARiON N		-	-	-
VARiON K		-	-	-
IFL 700 IQ		-	-	-
IFL 701 IQ		-	-	-
P 700 IQ		<i>Container for xxx nearly empty!</i>	<i>Air bubbles in the analyzer</i>	-



**Note**

The status info must be evaluated for each bit individually.

## 5.7 Measuring mode

Model	Code								
	00h	01h	02h	03h	04h	05h	06h	07h	08h
SensoLyt700IQ	pH	mV							
TetraCon700IQ	mS/cm	SAL	TDS	S/m					
TriOxmatic700IQ	mg/l O2	% O2							
TriOxmatic701IQ									
TriOxmatic702IQ									
SC FDO 700	mg/l O2	% O2							
SC FDO 701									
VisoTurb700IQ	FNU-Turb	NTU-Turb	TEF-Turb	mg/l SiO2	ppm SiO2	g/l TSS			
ViSolid700IQ	g/l TSS (M11)	% TSS (M11)	g/l TSS (M21)	% TSS (M21)	g/l SiO2 (M1 <sup>1</sup> )	% SiO2 (M1 <sup>1</sup> )	g/l SiO2 (M2 <sup>1</sup> )	% SiO2 (M2 <sup>1</sup> )	
AmmoLyt700IQ	mg/l NH4-N	mg/l NH4	mV						
AmmoLyt+									
AmmoLyt+K	mg/l K	mV							
NitraLyt700IQ	mg/l NO3-N	mg/l NO3	mV						
NitraLyt+									

<sup>1</sup> M1 = matrix type 1, M2 = matrix type 2  
matrix types: see ViSolid 700 IQ sensor operating manual

Model	Code								
	00h	01h	02h	03h	04h	05h	06h	07h	08h
NitraVis700/xIQ NitraVis70xIQ	mg/l NO3-N	mg/l NO3	mg/l NO3-N <sup>4</sup>						
NitraVis70xIQ NI	mg/l NO2-N	mg/l NO2							
CarboVis700/xIQ CarboVis70xIQ	mg/l <i>CODto</i>	mg/l <i>CODds</i>	mg/l <i>TOC</i>	mg/l <i>BOD</i>	mg/l <i>DOC</i>	<i>Abs/m</i> <i>SACto</i>	<i>Abs/m</i> <i>SACds</i>	mg/l <i>CSB4</i>	UVT 254 <sup>5</sup>
SolidVis700IQ SolidVis70xIQ	(m)g/l TSS <sup>2</sup>								
UV70x IQ SAC	1/m SAKgl	1/m SAKgs	% UVT 254	mg/l CSBgl Korrel	mg/l CSBgs Korrel	mg/l TOC Korrel	mg/l BSB Korrel	mg/l DOC Korrel	
UV70x IQ NOx	mg/l NO3-N	mg/l NO3							
MIQ/IC2	<sup>3</sup>								
VARiON A	mg/l NH4-N	mg/l NH4	mV						
VARiON N	mg/l NO3-N	mg/l NO3	mV						
VARiON K	mg/l K	mV							
P 700 IQ	mg/l PO4-P	mg/l PO4							
IFL 70x IQ	m								

<sup>1</sup> M1 = matrix type 1, M2 = matrix type 2

matrix types: see ViSolid 700 IQ sensor operating manual

<sup>2</sup> The measurement unit depends on the settings of the main sensor<sup>3</sup> The measured parameter and measurement unit depend on the settings of the display values (see MIQ/IC2 sensor operating manual).<sup>4</sup> Only xxxVis700/xIQ: Test measurement with standards<sup>5</sup> Only CarboVis70xIQ

## 6 What to do if ...



Here you will find causes and actions to take of errors concerning the PROFIBUS and Modbus communication only. General errors of the IQ SENSORNET system are dealt with in the IQ SENSORNET system operating manual.

### 6.1 PROFIBUS

**Data transmission between the bus master and IQ SENSORNET is faulty**

Cause	Remedy
– Incorrect wiring	– Check/change the connections (see section 2.1) – Use checklist according to section 3.3
– Incorrect setting of the address	– Check/change the setting of the address (see section 3.2.1)
– Incorrect protocol	– Check the version of the GSD file – Adapt the protocol
– IQ SENSORNET defective	– Return the IQ SENSORNET to YSI

**The PLC does not contain any plausible input data**

Cause	Remedy
– Input data and output data are not consistent	– When programming the PLC, define input data and output data as consistent over the entire data length
– The data interpretation of the PLC is not correct	– Observe the data alignment of the PLC data representation. If necessary, exchange the high-order and low-order bytes word by word

## 6.2 Modbus RTU

<b>Data transmission between the bus master and IQ SENSORNET is faulty</b>	<b>Cause</b>	<b>Remedy</b>
	<ul style="list-style-type: none"> <li>– Incorrect wiring</li> </ul>	<ul style="list-style-type: none"> <li>– Check/change the connections (see section 2.1)</li> <li>– Use checklist according to section 3.3</li> </ul>
	<ul style="list-style-type: none"> <li>– Incorrect setting of address, baud rate, parity</li> </ul>	<ul style="list-style-type: none"> <li>– Check/change the settings (see section 3.2.1)</li> </ul>
	<ul style="list-style-type: none"> <li>– Incorrect protocol</li> </ul>	<ul style="list-style-type: none"> <li>– Adapt the protocol</li> </ul>
	<ul style="list-style-type: none"> <li>– Controller of the IQ SENSORNET defective</li> </ul>	<ul style="list-style-type: none"> <li>– Return the controller to YSI</li> </ul>
<b>The PLC does not contain any plausible input data</b>	<b>Cause</b>	<b>Remedy</b>
	<ul style="list-style-type: none"> <li>– The data interpretation is not correct</li> </ul>	<ul style="list-style-type: none"> <li>– Heed the data formats of the IQ SENSORNET (see also section 4.4.3).</li> </ul>
	<ul style="list-style-type: none"> <li>– The data interpretation of the PLC is not correct</li> </ul>	<ul style="list-style-type: none"> <li>– Observe the data alignment of the PLC data representation. If necessary, exchange the high-order and low-order bytes word by word</li> </ul>

### 6.3 Ethernet fieldbuses

#### No network connection

Cause	Remedy
<ul style="list-style-type: none"> <li>– Ethernet hardware defective, e.g.           <ul style="list-style-type: none"> <li>– Ethernet cable defective</li> <li>– Ethernet connection to MIQ/MC2, MIQ/MC3 or DIQ/S 28X-E[F]</li> <li>– Switch or router to which the IQS is connected is defective</li> </ul> </li> </ul>	<ul style="list-style-type: none"> <li>– Open the MIQ/MC2 or MIQ/MC3 and check the red Ethernet LED.</li> <li>– The red Ethernet LED is not illuminated (hardware defective): Use other hardware, e.g.: Ethernet cable, Ethernet connector on the router, router</li> <li>– The red Ethernet LED is illuminated (hardware OK): Check for other errors (see below)</li> </ul>
<ul style="list-style-type: none"> <li>– Wrong setting in the IQ SENSORNET (system/TCP/IP settings menu)</li> </ul>	<ul style="list-style-type: none"> <li>– Correct the settings (e.g. DHCP yes, but no network addresses displayed)</li> </ul>
<ul style="list-style-type: none"> <li>– Wrong setting in the router/switch</li> </ul>	<ul style="list-style-type: none"> <li>– Correct the settings</li> </ul>
<ul style="list-style-type: none"> <li>– Blocking by firewall</li> </ul>	<ul style="list-style-type: none"> <li>– Contact your network administrator or a network specialist</li> </ul>

#### The PLC does not contain any plausible input data

Cause	Remedy
<ul style="list-style-type: none"> <li>– Input data and output data are not consistent</li> </ul>	<ul style="list-style-type: none"> <li>– When programming the PLC, define input data and output data as consistent over the entire data length</li> </ul>
<ul style="list-style-type: none"> <li>– The data interpretation of the PLC is not correct</li> </ul>	<ul style="list-style-type: none"> <li>– Heed the data formats of the IQ SENSORNET (see also section 4.4.3).</li> <li>– Observe the data alignment of the PLC data representation. If necessary, exchange the high-order and low-order bytes word by word</li> </ul>

## 7 Contact Information

### 7.1 Ordering & Technical Support

Telephone: (800) 897-4151  
(937) 767-7241  
Monday through Friday, 8:00 AM to 5:00 PM ET

Fax: (937) 767-1058

Email: [info@ysi.com](mailto:info@ysi.com)

Mail: YSI Incorporated  
1725 Brannum Lane  
Yellow Springs, OH 45387  
USA

Internet: [www.ysi.com](http://www.ysi.com)

When placing an order please have the following information available:

YSI account number (if available)	Name and Phone Number
Model number or brief description	Billing and shipping address
Quantity	Purchase Order or Credit Card

### 7.2 Service Information

YSI has authorized service centers throughout the United States and Internationally. For the nearest service center information, please visit [www.ysi.com](http://www.ysi.com) and click 'Support' or contact YSI Technical Support directly at 800-897-4151.

When returning a product for service, include the Product Return form with cleaning certification. The form must be completely filled out for an YSI Service Center to accept the instrument for service. The Product Return form may be downloaded at [www.ysi.com](http://www.ysi.com) and clicking on the 'Support' tab.





# Xylem |'ziləm|

- 1) The tissue in plants that brings water upward from the roots;
- 2) a leading global water technology company.

We're 12,500 people unified in a common purpose: creating innovative solutions to meet our world's water needs. Developing new technologies that will improve the way water is used, conserved, and re-used in the future is central to our work. We move, treat, analyze, and return water to the environment, and we help people use water efficiently, in their homes, buildings, factories and farms. In more than 150 countries, we have strong, long-standing relationships with customers who know us for our powerful combination of leading product brands and applications expertise, backed by a legacy of innovation.

**For more information on how Xylem can help you, go to [www.xyleminc.com](http://www.xyleminc.com)**



a **xylem** brand

YSI  
1725 Brannum Lane  
Yellow Springs, OH 45387  
Tel: +1 937-767-7241; 800-765-4974  
Fax: +1 937-767-1058  
Email: [info@ysi.com](mailto:info@ysi.com)  
Web: [www.yси.com](http://www.yси.com)

©Xylem Inc